

INSTALLATION GUIDE

WallAccess - No Door



IMPORTANT READ THIS FIRST

- Inspect stair for any damage prior to installation.
- Stair is <u>NOT</u> to be installed while home is under construction and used as a construction stair.
- Correct number of treads for floor-to-ceiling height <u>MUST</u> be attached. See TABLE A on page 2. DO NOT ADD MORE TREADS THAN SHOWN ON SPECIFICATIONS FOR YOUR HEIGHT.
- Adjustment Screw on stabilizer arm <u>MUST</u> be set before climbing stair. This adjustment provides structural support necessary for use. See page 8.

Failure to follow any or all of these guidelines can result in damage to the stair and will void the warranty.

If you have any problems or concerns with stair, call SP Partners LLC immediately at 877-369-6996

Page 1 June 2012



- This stairway is for residential use only.
- Maximum capacity is 350 lbs.
- Two helpers may be needed to lift the stair in order to anchor it in place.
- Improper installation can result in stair collapse and bodily injury.

Parts Included

(4) 1 1/2" Lag Screws			
(1) Pole Hook			
(2) Pole			
(6) 1/2" Wood Screws	Parrier.		

Specifications

Check your unit to be sure you have the correct model and total number of treads for the floor-to-floor height of your installation.


MODEL#	MINIMUM ROUGH OPENING SIZE	TREAD WIDTH	# OF TREADS	FLOOR TO FLOOR HEIGHT RANGE	LANDING SPACE
WA2648-92	26" X 48"	14"	9	6 - 10" to 7' - 8"	40"
WA2648-102	26" X 48"	14"	10	Over 7' - 8" to 8' - 6"	43"
WA2648-112	26" X 48"	14"	11	Over 8' - 6" to 9' - 4"	45"
WA2648-122	26" X 48"	14"	12	Over 9' - 4" to 10' - 2"	48"

TABLE A

Page 3 June 2012

Step 1 - Installing the stair


• Place stair on floor where it will be installed within the wall opening and pull down on (pivot) the stair while holding the base so it is in a full horizontal position as shown below.

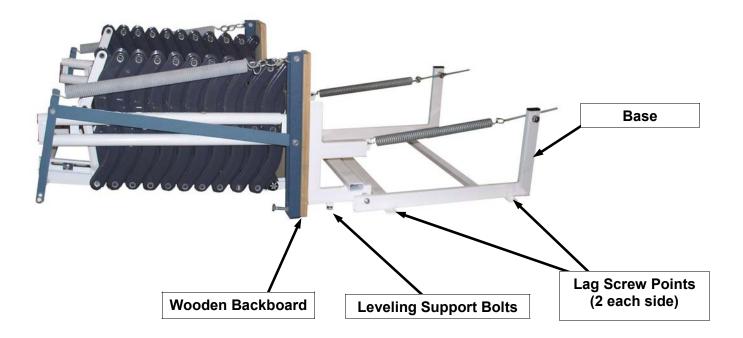


- Center the stair within the opening (side to side) and move stair forward towards edge of opening so that the stair's wooden backboard is past the opening but the leveling bolts are resting inside the opening on a solid supported surface. (Be sure floor in the opening is level side to side).
- Lag screw the stair base to the floor using the four lag screws provided.
- Adjust the two leveling support bolts so they make firm contact with the floor. These will provide support to the stair as you climb.

Page 4 June 2012

Step 2 - Adjusting the stair

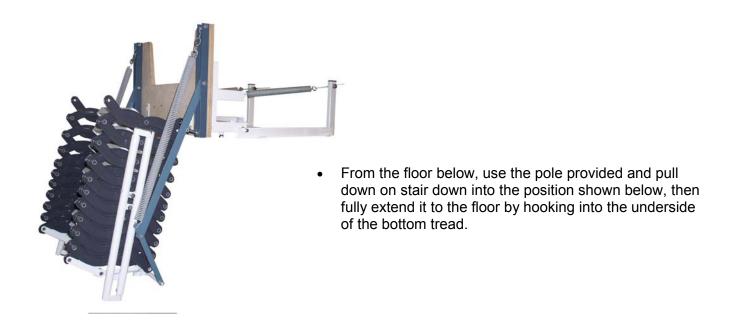

- With stair extended to floor, adjust set screw under stabilizer arm so it touches bottom of arm. This
 provides support to keep stair straight. Figure 1.
- Slide bolt head up until it stops and tighten. This adjustment maintains stair height. Be sure to do both sides. Figure 2.

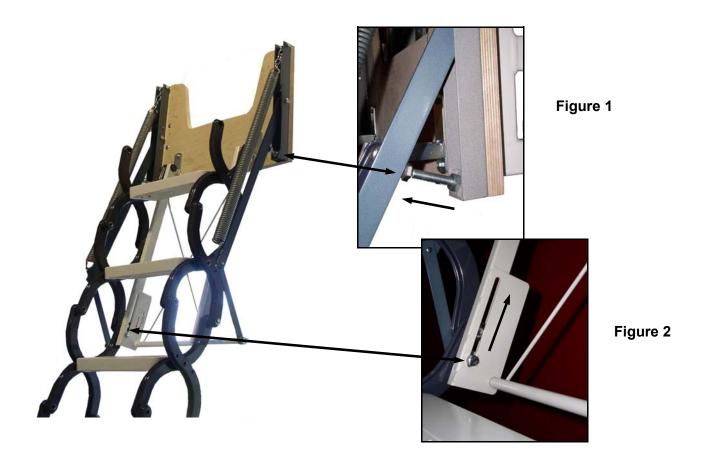

Congratulations!

You are now ready to begin using your Rainbow Attic Stair. As with any product, be sure to follow instructions for safe, efficient and trouble-free operation for years to come.

*** Children should never be allowed to operate or climb any attic stair. ***

LIMITED WARANTY

SP Partners, LLC warrants that the unit will be free from any defects in material and workmanship for **one year** from purchase date provided that the stair is installed in compliance with the preceding instructions and operated and maintained in accordance with these instructions and applicable warnings.

This warranty specifically excludes any and all non-defect damage, any and all damage, injuries and losses arising from improper installation of this product, unreasonable use to include exceeding the specified weight limitations, and any and all labor charges incurred for removing or reinstalling a repaired stair unit or any of its components.

During the warranty period stated, should the stair unit or any of its components exhibit a manufacturing defect please first call SP Partners, LLC at 877-369-6996 before dismantling the product in order to determine the extent of the defect and what course of action needs to be taken to correct the problem. A proof of purchase will be required in all cases.

ADDITIONAL EXCLUSIONS

SP Partners, LLC's above-stated express limited warranty is being made in lieu of all implied warranties of any kind, including those as provided by the Uniform Commercial Code for merchantability of the product and for fitness of the product for a particular purpose. All such implied warranties, including those of merchantability and/or fitness for a particular purpose, are excluded and disclaimed. Furthermore, all claims for consequential damages and for incidental damages that may arise from a breach of the above-mentioned express warranty are also excluded. In no event shall SP Partners, LLC be liable for any breach of warranty and/or for any negligence and/or for any strict liability which would exceed in damage amount the cost of the stair unit.

No representative or person is authorized to assume for SP Partners, LLC, any responsibility which would be either an alternative to or in addition to the express product warranty as stated above. This warranty gives you certain specific legal rights as were set forth above and any other rights that may vary from state to state. If any portion of this express warranty is deemed to be unenforceable at any time hereafter, any such provision shall be severed from this agreement, but all other terms, conditions and provisions shall remain in full force and effect.

SP Partners, LLC

Tel: 877-369-6996

Website: www.RainbowAtticStair.com Email: info@RainbowAtticStair.com